



# CHOGORI

**1 Strip and prepare Cable.**

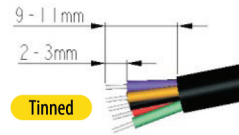


**2 Thread Seals Nut, O- Ring, Clamp Ring and Gasket onto the cable.**

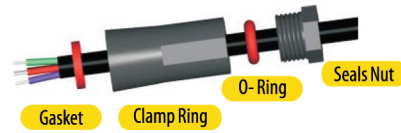


**3 Solder wire**




**4 Assemble Gasket into Clamp ring: Gasket Direction (Flat Surface to Housing)**



**5 Assemble Clamp Ring to Housing**



**6 Put O-Ring to the Clamp Ring.**

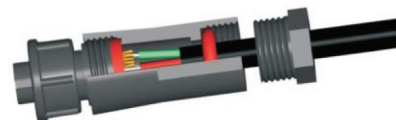

**7 Assemble Seals Nut and Clamp Ring.**

